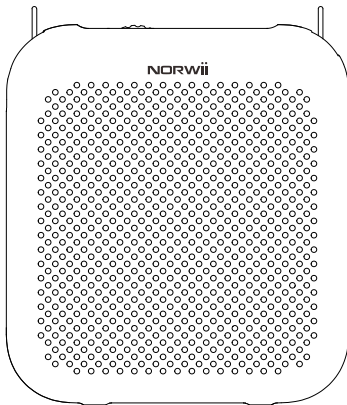
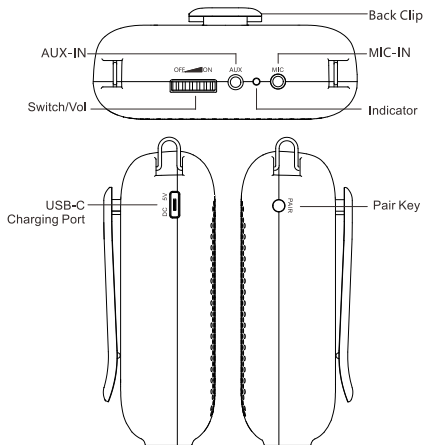

Portable Digital Voice Amplifier
S358 with S128
User Manual



Function map:

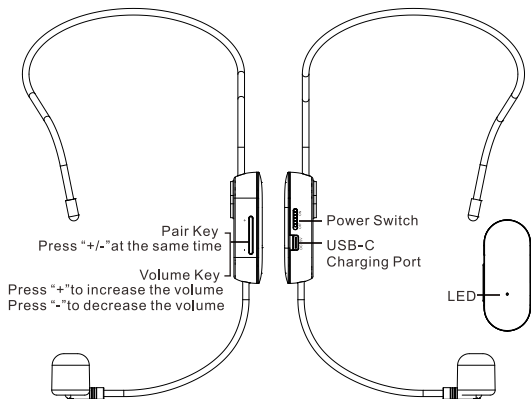
Wireless Voice Amplifier

S358








wireless microphone

S128



Keys and Ports instruction:

	Mic-in	In Standby mode, insert microphone to 3.5mm microphone interface to amplify.
	Aux-in	3.5mm audio interface, support music play, insert audio cable to play music automatically.
	Pair key	Long press Pair key, you can connect the wireless microphone, and the wireless amplification can be achieved after the pairing is successful.
	USB-C Charging Port	Charging port supports charging through 5V mobile phone charger and computer USB port.
	Dial Volume Switch	Rotating the dial can switch on/off the amplifier and adjust the volume. Rotate the switch clockwise (pull right) to turn on the amplifier and increase volume, rotate the switch counterclockwise (pull left) to decrease volume till turn off the power.

Operation description:

1. Power switch of the voice amplifier:

Pull right the switch clockwise, turn on the amplifier when you hear a "click" and the indicator becomes on. Pull left the switch counterclockwise, turn off the amplifier when you hear a "click" and the indicator becomes off.

2. Volume control of the voice amplifier:

Rotate the volume dial to adjust the volume. Pull right the button clockwise to increase the volume and pull left the button counterclockwise to decrease the volume.


3. **Wired microphone voice amplification:**

Please wear a wired microphone, adjust the microphone position appropriately, and maintain a distance of at least 50 centimeters from the amplifier to avoid whistling. Then insert the audio plug of the wired microphone into the MIC interface of the voice amplifier, adjust the microphone head to face the mouth, and maintain a distance of 0.5 cm to 1 cm. At this point, the voice can be amplified. It is recommended not to remove the sponge cover, as it can weaken airflow, reduce noise, and make the sound clear.

4. **Pairing operation between wireless voice amplifier and wireless microphone:**

The product has been paired before leaving the factory. It is not necessary to pair again, but it can be used for wireless sound reinforcement. If it is necessary to pair again according to the actual situation.

Take the pairing operation of the voice amplifier and the S128 Wireless microphone, as an example:

1) Turn on the power switch of the voice amplifier, and long press the code matching key  of the voice amplifier for 3 seconds. When the green indicator turns into the yellow indicator, it indicates that the code is waiting for pairing. If the pairing operation is not completed within 30 seconds, it will exit the pairing state and give the voice prompt "Pairing failed"; After entering the pairing state, long press the UHF key again, it will exit the pairing state and give the voice prompts "Pairing failed".

2) Within 30 seconds after the amplifier enters the pairing state, turn off the power switch of the S128 wireless microphone, and turn it back on, and then press and hold the volume "+" key and the volume "-" key on the side of the wireless microphone at the same time to perform pairing. About 3 seconds later, the LED of the wireless microphone flashes rapidly 3 times, and at the same time, the voice amplifier prompts "pairing successful", indicating that the voice amplifier and wireless microphone are paired successfully.

3) If the voice prompts "Pairing failed", or there is crosstalk with other voice amplifiers, please repeat the above steps 1) and 2) to re-pair.

5. Aux mode of the voice amplifier:

Connect the voice amplifier with computers, mobile phones, PAD, MP3, MP4 and other devices through the 3.5mm AUX audio cable to play audio, it can be used as external speaker at this time.

6. Power switch of the S128 wireless microphone:

Push the S128 wireless microphone switch to "ON" to turn on the power, and the blue indicator lights up. Push the switch to "OFF" to turn off the power, and the blue indicator lights off.

7. S128 wireless microphone:

Put the S128 wireless microphone on your head directly and adjust the microphone of the S128 wireless microphone to aim at your mouth, about 5mm away from your mouth. At this point, you can directly amplify your voice and adjust the size of the sound by pressing the "+" or "-" keys.

Charging instructions:

1. When the battery is low, you can use the complimentary USB-C charging data cable to charge the voice amplifier through devices such as a computer, 5V phone charger, mobile power supply, etc.

2. The product only supports standard 5V charging and does not support all kinds of QC fast charging. Charging with a voltage higher than 5V will burn the product or fail to charge.

3. LED indicator light description:

S358 wireless voice amplifier.

Voice amplifier status		LED indicator status
Low battery		LED indicator light flashing fast
Turn on the power to charge	charging	Yellow light always on

Turn off power to charge	Charged	Green light always on
	charging	Red light always on
	Charged	Green light always on

S128 wireless microphone.

Wireless microphone status		LED indicator status
Low battery		LED indicator light flashing fast
Turn on the power to charge	charging	Purple light always on
	Charged	Green light always on
Turn off power to charge	charging	Red light always on
	Charged	Green light always on

Product specification:

1. Specifications for wireless voice amplifier with 4000mAh lithium battery.

Rated power	5W	Max power	10W
Loudspeaker	3 inches 2 ohmic magnetic speaker	Frequency response	120Hz-15KHz
Battery	3.7V/4000mAh, 2 lithium batteries in parallel	Charging voltage	USB/DC 5V 1A
Charging time	4-6 hours	Using time	20-25hours
Size	91.1*101.5*37.8mm	Net weight	205.5g

2. Specifications for S128 wireless microphone.

Battery	3.7V/600mAh	Charging voltage	USB/DC 5V 0.5A
Charging time	2 hours	Using time	5-7hours
Frequency	660MHz-698MHz	Wireless distance	20 meters

Packing List:

Voice amplifier*1, 3.5mm audio cable*1, USB-C cable*2, wireless microphone*1, wired microphone *1, adjustable waistband*1, user manual *1.

Tips and cautions:

1. When you use it for the first time, or after a long time before you use it again, please keep the amplifier be fully charged to ensure battery life.
2. To avoid distortion or damage caused by excessive voltage or current, please do not insert the external sound source signal into the MIC interface.
3. Please don't disassemble or repair it by non-professional technical personnel. If there are any problems, please contact our company for after sale service.
4. To prevent the danger of short-circuiting, please keep products or accessories away from water, moisture, rain, or splash.
5. Do not use it in inflammable and explosive areas or in areas where radio equipment is prohibited. When you are entering dangerous areas or prohibited areas, power should be turned off to avoid potential safety hazards.
6. Do not use it in high temperature, high pressure, and high humidity environment (such as sunshine exposure, stove, heater, humidifier, water pool, etc.). Do not place it or close to dangerous sources (fire source, liquid, explosive, high-speed machinery, etc.) to avoid damage and danger.
7. To protect the environment, please put the discarded amplifier in the designated trash can or send it back to the manufacturer. It should not be discarded at will.

FCCID: 2AXGRVA1

Shanghai Norwii Technology Co., Ltd

Address: No.277 Jinfeng Road, Pudong New Area, Shanghai, 201201, China

Tel: 86-21-51872080

Email: support@norwii.com